


Modesty Panel Installation Instructions

Included are your choice of permanent or removable clamps.

To install permanent clamps simply screw the shorter end of the L bracket in to the underside of the desk using the screws provided. As pictured.

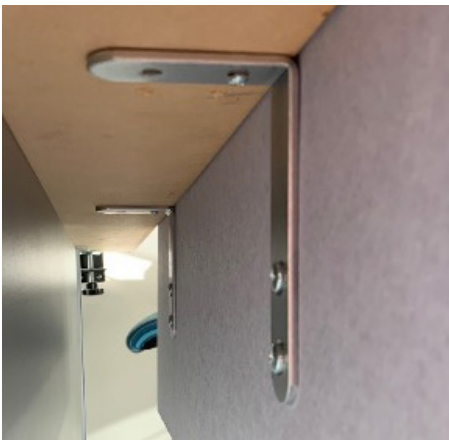

Take care to ensure the bracket is flush with the edge of the desk to ensure the Modesty Panel sits straight once installed.

Then lift the desk screen into place, slide the two remaining bolts through the countersunk holes and through the modesty panel. Secure the face plate to the outside of the desk screen by screwing the bolts in.

